

Case tamper switch output(to prevent vandalism)		√	√	√	√	√	√	√
Digital door driver		*	*	*	*	*	*	*
Access Mode	Card only	√	√	√	√	√	√	√
	Card or keypad(PIN)	√	√	√	√	√	√	√
	Card & Keypad	√	√	√	√	√	√	√
	Keypad only	√	√	√	√	√	√	√
	Free Access by the zone	√	√	√	√	√	√	√
	Duress code	√	√	√	√	√	√	√
Editing through PC by Manual	By single card	√	√	√	√	√	√	√
	By block ranges	√	√	√	√	√	√	√
	Learning by reading	*	√	√	√	√	√	√
Projects check		10	10	10	10	10	10	10
Node address setting by PC/manual		0-99	0-99	0-99	0-99	0-99	0-99	0-99
List system parameters by serial output		√	√	√	√	√	*	*
List block range of legal/illegal card status		√	√	√	√	√	*	*
Serial output (TTL or 232C serial)		√	√	√	√	√	√	√

Note:

- PP-6730/6830, PP-6707/6878, PP-6700, PP-5707/5878, PP-5700 are able to choose type S0, or T0, or T1, T2, T3.
- PUN-377/378, PUN-370 are able to choose type S, or S6
- For PP-6700 / PP-5700 / PUN-370 models, the keypad related functions are omitted.
- The “*” mark mean optional function which is not equipped for standard model, you may request by special order.
- “—” : Not available
- “√” : Yes

Ordering information:

